

IEC 60870-5-104 OPC Device Driver License Registration

- 1. Install the software
- 2. Open ReLab OPC Console



3. Navigate to Tools | Register Driver

| ReLab OPC | Console | | | | | |
|------------------|-----------|---------------------------------------|-----------|--|-----|--|
| e Configure | e View | Tools Help | | | | |
| | X | Console Options OPC Server Options | | | | |
| onfiguration | Dashboi | Register Driver | | | | |
| Loaded De | vice Dr | Register Enterprise | | | | |
| | | | | | | |
| 05/14/20 08:4 | 47:30.905 | Client (02631F88) added group "CVOF | CConsole" | | | |
| nisters Rel ab (| OPC Serve | r device driver | | | NUM | |

- 4. Click on Register Driver menu item
- 5. Select IEC 60870-5-104 OPC Device Driver

| eLab OPC Console: | Select Device Driver to register | |
|-------------------|---|---|
| - | | |
| EC-61850 D 👔 | levice Driver | - |
| C RL.61850.1 | | |
| C:\Program | Files (x86)\ReLab Software\Bin\RL61850.dll | |
| ReLab MOD | BUS OPC Device Driver | |
| RL.MODBUS | .1 | |
| C:\Program | Files (x86)\ReLab Software\Bin\RLMODBUS.dll | |
| SEL OPC SEL Dev | vice Driver | |
| SEL_OPC.Sel | Opc.1 | |
| C:\Program | Files (x86)\ReLab Software\Bin\SEL_OPC.dll | |
| EC-60870-1 | .04 Device Driver | |
| RL.60870.1 | | |
| C:\Program | Files (x86)\ReLab Software\Bin\RL104.dll | |
| any the ender | nd forward the information to OBC driver | |
| opy are coue a | | |
| RL.60870.1: FH | BY5-B0JKW-05NVQ-FR5S8 | |
| | | |
| | | |
| | | |
| nter license co | de you received from OPC driver | |
| | | |
| | | |
| | | |
| | | |
| | Benister Close | |
| | (lugiou) | |



IEC 60870-5-104 OPC Device Driver License Registration

6. Copy/Paste customer ID and email to sales@relabsoft.com

| EC-61850 D | avice Driver | |
|-----------------------------------|--|--|
| PI 61850 1 | | |
| C:\Program F | Files (x86)\Rel ab Software\Bin\RI 61850 dll | |
| Relah MODE | SUS OPC Device Driver | |
| RLMODBUS. | 1 | |
| C:\Program F | - Files (x86)\ReLab Software\Bin\RLMODBUS.dll | |
| SEL OPC SEL Dev | ice Driver | |
| SEL_OPC.Sel | Opc.1 | |
| C:\Program F | Files (x86)\ReLab Software\Bin\SEL_OPC.dll | |
| EC-60870-1 | 04 Device Driver | |
| RL.60870.1 | | |
| C:\Program F | Files (x86)\ReLab Software\Bin\RL104.dll | |
| | nd forward the information to OPC driver | |
| opy use code al | | |
| RL.60870.1: FHI | BY5-B0JKW-05NVQ-FR5S8 | |
| ору ше собе аг RL.60870.1: FHI | BY5-B0JKW-05NVQ-FR5S8 | |
| AL.60870.1: FHI | BY5-BOJKW-05NVQ-FR5S8 | |
| RL.60870.1: FHI | BY5-BOJKW-O5NVQ-FR5S8 de you received from OPC driver | |
| RL.60870.1: FHI | BY5-BOJKW-O5NVQ-FR5S8 de you received from OPC driver | |
| RL.60870.1: FHI | BY5-BOJKW-O5NVQ-FR5S8 | |
| RL.60870.1: FHI | BY5-BOJKW-O5NVQ-FR5S8 | |
| AL.60870.1: FHI | BY5-BOJKW-O5NVQ-FR5S8 de you received from OPC driver | |

7. You will get (email) License Code which you would need to enter into text box below and click on **Register** button